



M14X-BBSH / M16X-BBSH

**** NOTE - The secondary bush kit is designed to be used with solid or good condition PU diff bushes. DO NOT use with OEM or soft PU bushes as the secondary bush will take up an excessive amount of the load ****


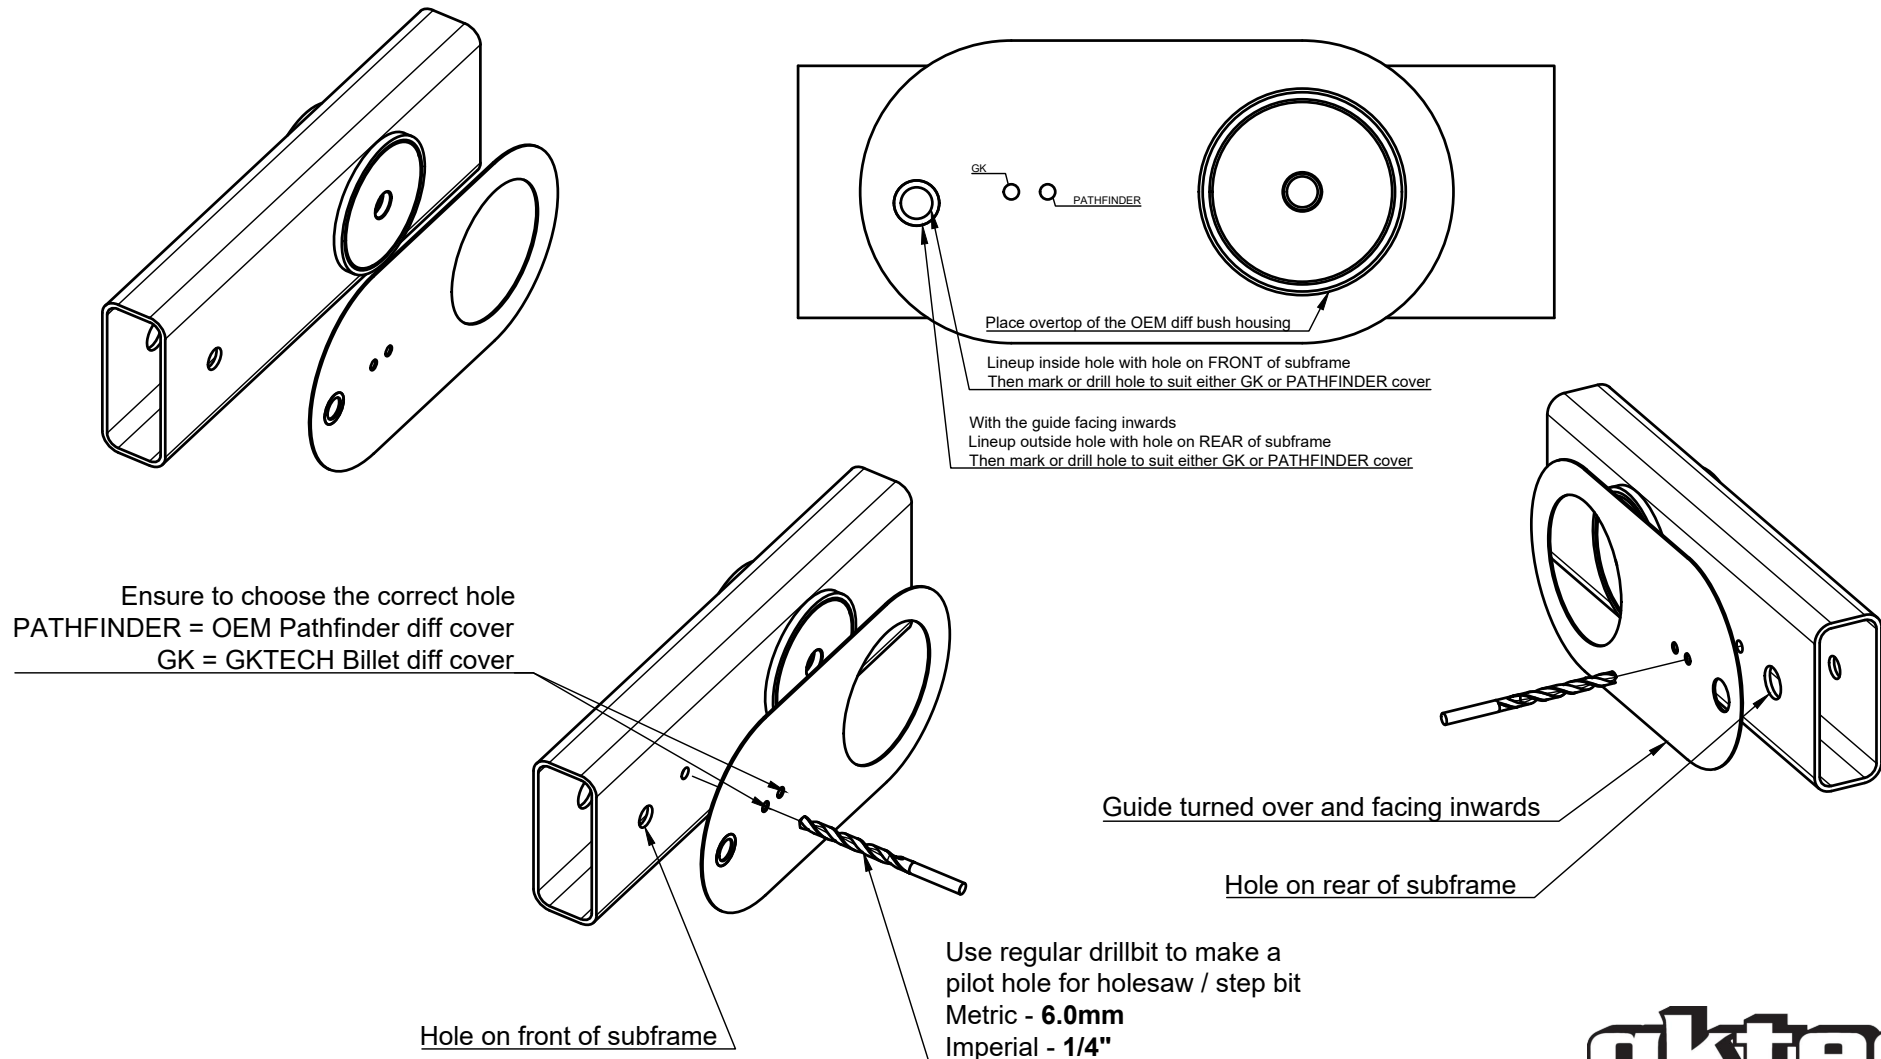


M14X-BBSH / M16X-BBSH

Use stepper drill or holesaw
To drill front hole
Metric - 16mm (M14)
18mm (M16)
Imperial - 5/8" (M14)
11/16" (M16)

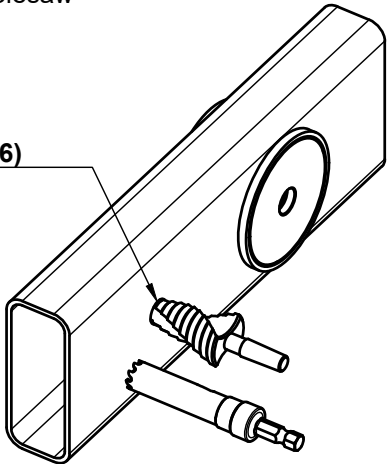

Use stepper drill bit or holesaw
To drill rear hole
Metric - 32mm
Imperial - 1-1/4"

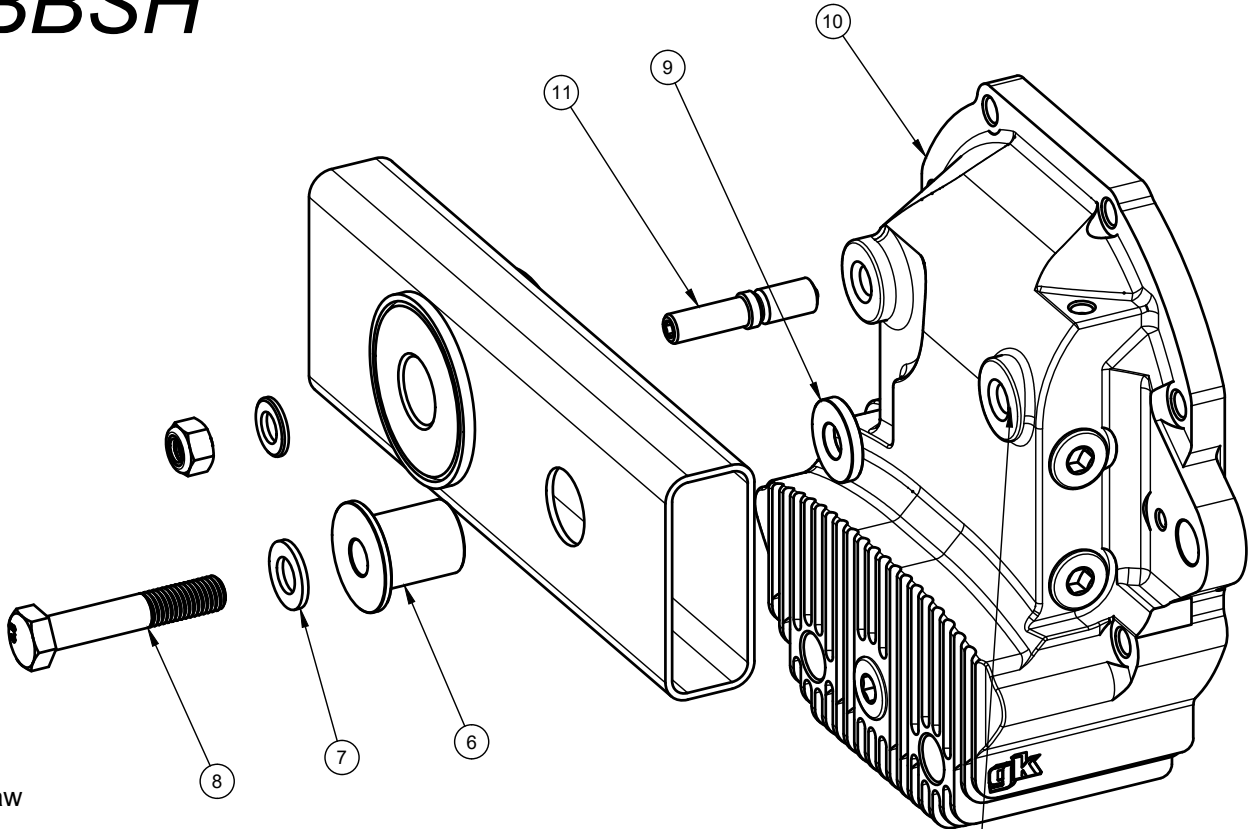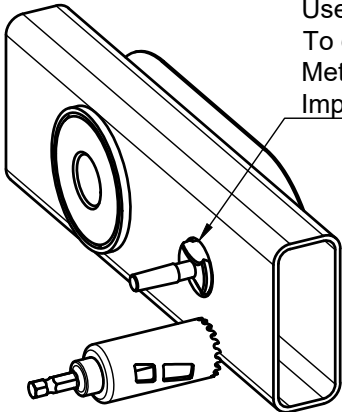

Install remaining components as shown here

Note that the secondary diff stud that comes with the cover is discarded with the bolt in kit

**** Recommended to install the bolt in secondary bush BEFORE installing the two front diff ear bolts. This will make alignment of the rear cover much easier ****



11	1	Diff cover stud
10	1	350Z Diff cover
9	1	5mm Diff Spacer
8	1	M14 x 2.0 x 80 Bolt
7	1	M14 Washer
6	1	Secondary diff bush
Item	Qty	Description
Parts List		